



# Samsung NP-NC10-KA02US Back Plate Replacement

This guide will show you how to remove the back plate of the netbook so you can access the hardware components.

Written By: Brian Smith





## TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Battery



- Locate the external battery on the bottom side of the device.
- Locate the tab on the right side of the battery.
- Shift the tab to the left.

## Step 2



- Locate the tab on the left side of the device's battery.
- Push the left tab to the right.

## Step 3



- Pull the battery up from the device.


## Step 4 — Back Plate



- Locate the 14, 3.93 mm, screws that need to be removed on the base of the computer.




## Step 5

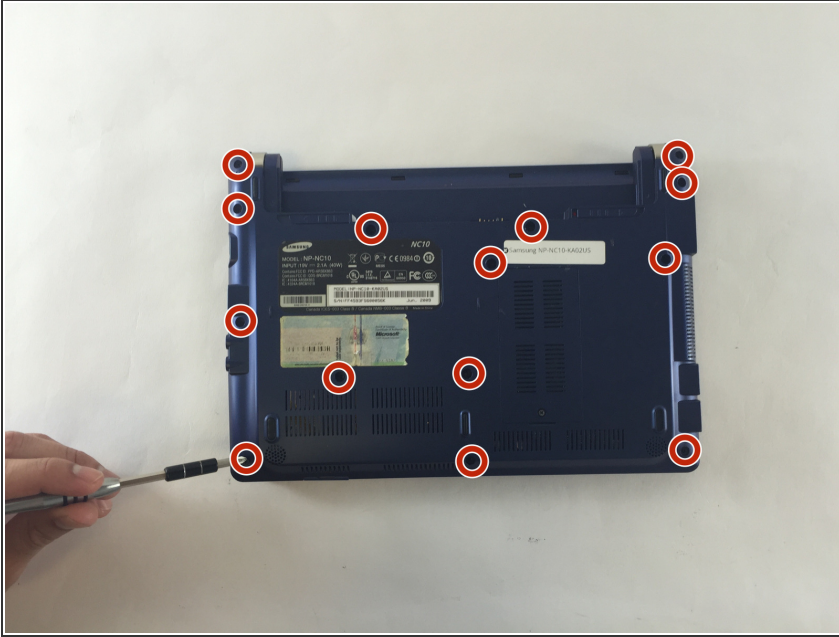

- Remove all 14 of the 3.93 mm screws using a PH1 screw bit.

## Step 6

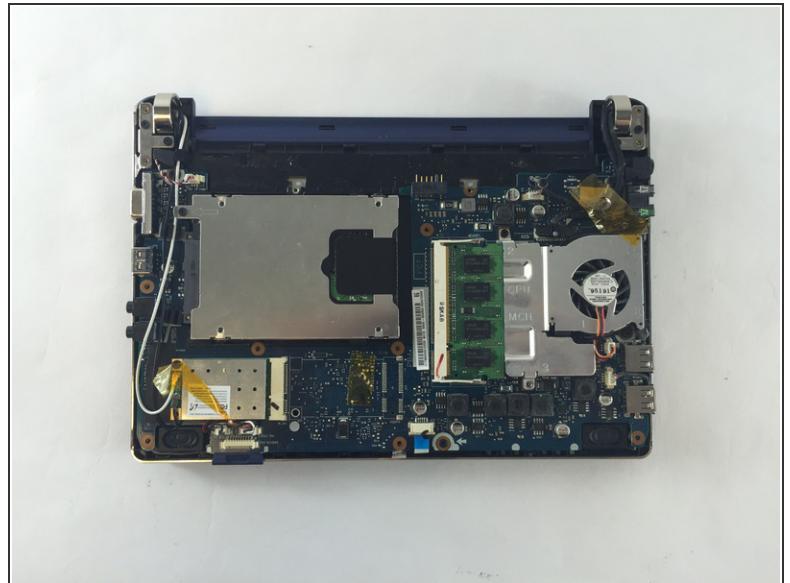

- Using two plastic opening tools remove the back plate.
- ⓘ These plastic opening tools have a flat-head that extends as a wedge which are utilized to separate pressure fit plastic components without causing any damage to them.
- The back plate is now removed exposing all of the hardware components.

This document was last generated on 2017-06-18 02:24:18 AM.